Installation instruction

ARAT Special mount for Navigation Systems

Artikel-Nr.: NS 1242
for Audi A3
1996 .....April 2003
Also for Seat Leon, 2000...04

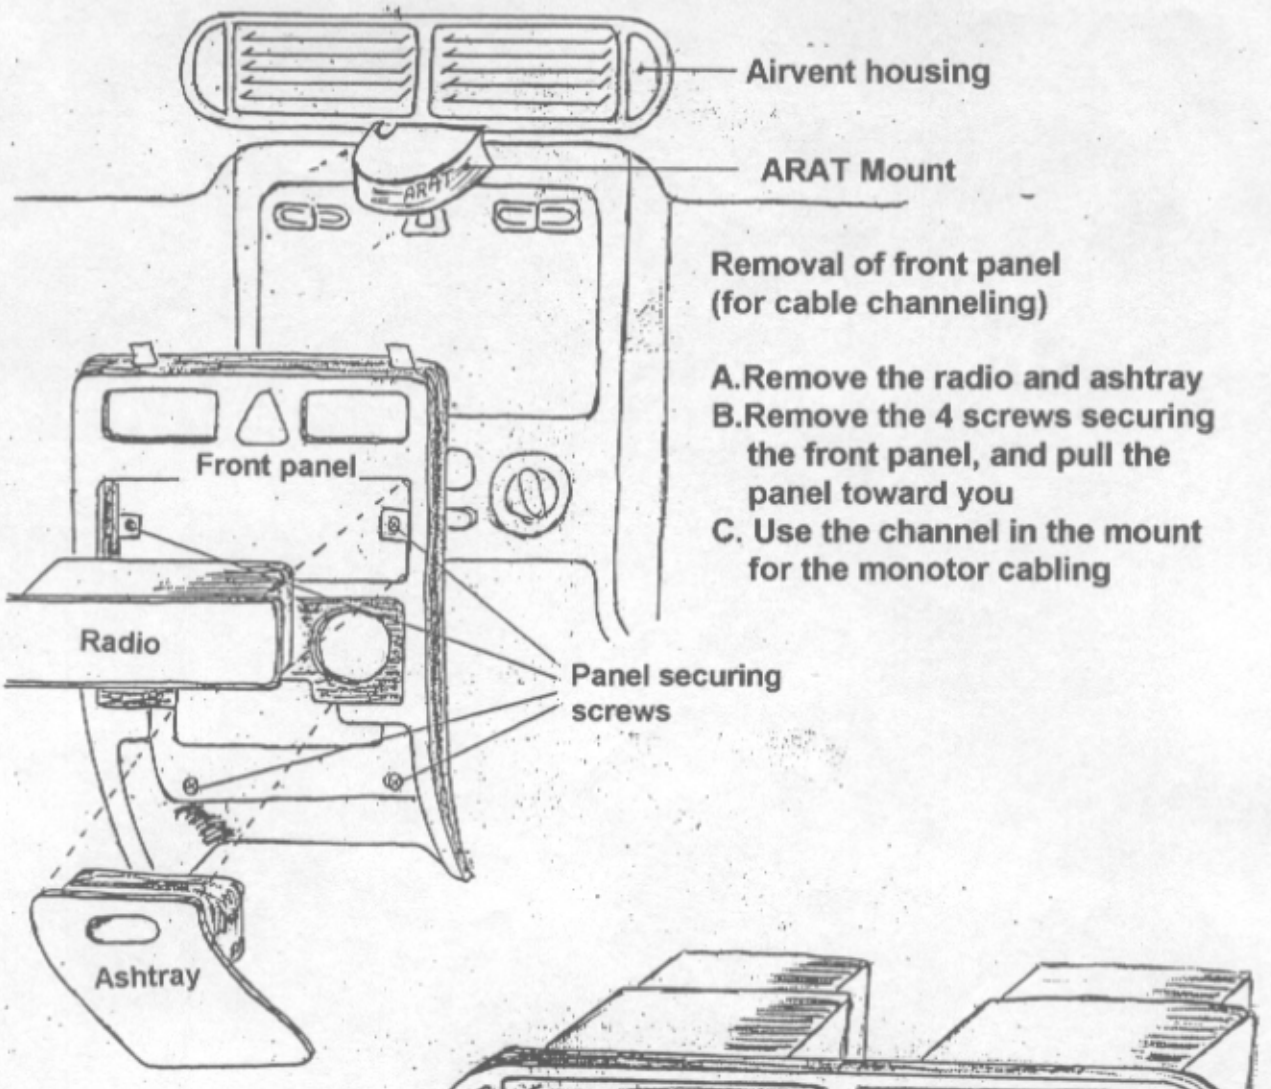

Removal of front panel (for cable channeling)

A.Remove the radio and ashtray
B.Remove the 4 screws securing the front panel, and pull the panel toward you
C. Use the channel in the mount for the monotor cabling

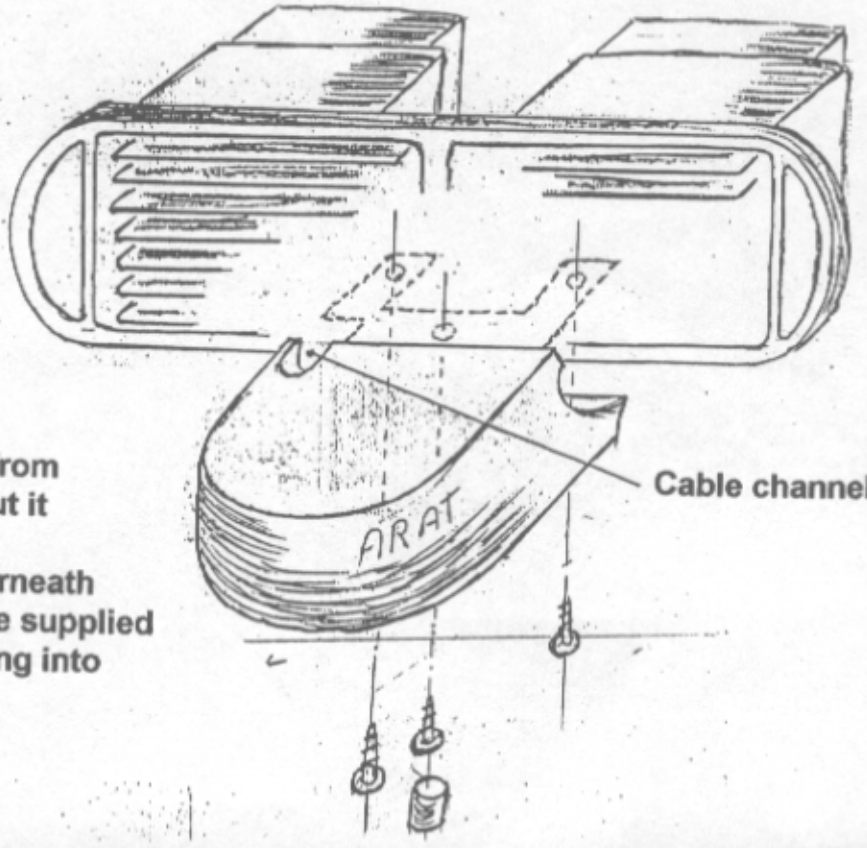

Installation instruction:

1. **Remove the airvent housing from the dashboard by pulling it out it is only a push fit**
2. **Secure the Mount to the underneath of the airvent housing with the supplied screws and replace the housing into its recess in the dashboard.**